

Steps to Install the Emergency Push Button

1. Check the button for any visible defects or damage. If damage is visible the unit should be replaced. Locate the Call Button on a flat surface in a visible location in the room.
2. If the call button is new, pull out the plastic battery tab located on the underside of the unit. The tab is not needed for use and can be discarded.
3. If the audio message is not needed, ensure the On/Off switch is set to the "Off" position. Note: this switch does NOT turn off the unit or disable the wireless signaling, it only disables the audio message. This switch is located on the circuit board inside the unit.
4. Download and install the Mobile App and follow the instructions to pair the device.

Cleaning the Call Button

1. Wipe down with moistened cloth using only soap and water, and wipe dry. Avoid using any cleaning agent containing bleach (sodium hydroxide) as an ingredient.
2. Check for any damage that may have occurred. If damage is visible, the unit should be replaced.
3. **DO NOT** immerse the Call Button in any liquid.
4. After cleaning, repeat all of the installation steps.

Care and Use

1. Replace the batteries every two years by opening the base of the unit from the bottom. The device takes (2) AAA batteries.

SAFE AT HOME MOBILE APP

